


UNIVERSAL ROD INSTRUCTIONS

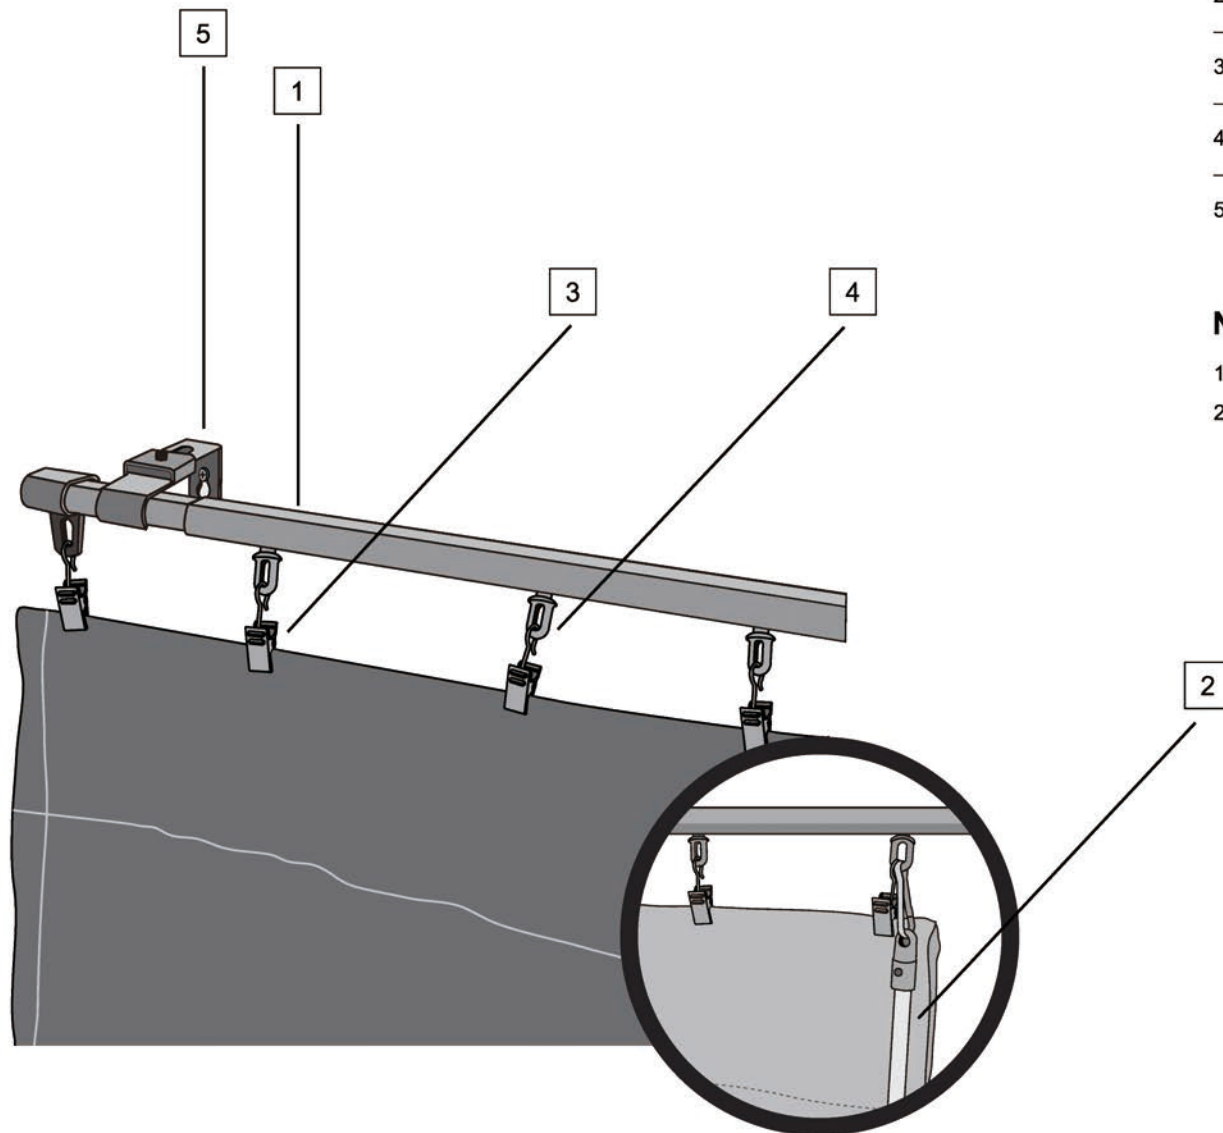

1. Extendable Rod

2. Baton

3. Clips

4. Carriers (for clip or drapary pins)

5. Wall Bracket with outer(larger)/inner(smaller) rod clamp


NOTE :

1. This is one-way draw with baton.

2. Drapery pins are sold separately.

WALL-MOUNT INSTALLATION

- ① The smaller Clamps are for the inner (smaller) Rod section, and the larger Clamps are for the outer (larger) Rod section. Position Brackets in desired end locations on wall and mark the mounting hole locations. Position the other Bracket(s) evenly between these end Brackets and mark these holes as well (Brackets should never be more than 48" apart and must be level with each other). Note where the larger outer Rod ends and be sure the appropriate sized Clamp is used in each location.

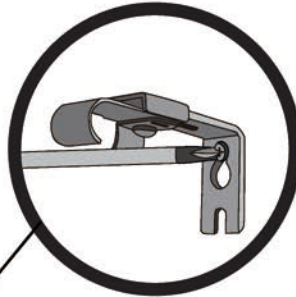

- ② Screw the Brackets to wall using the long screws provided. Note: If the desired hole locations are not over a wall stud, Anchors (provided) are required for proper installation (refer to Anchor instructions). Loosen projection adjustment bolt slightly so Clamp can slide on Bracket.



- ③ Attach Rod to middle Bracket(s) first. Twist Clamp using a flat blade screwdriver - clamping onto the Rod and tighten in place. Repeat for all Brackets.



- ④ Adjust Rod at each Bracket to desired projection from wall and tighten the adjustment bolts.

- ⑤ (for curtain panel): Attach a Clip onto the end cap of Rod on the end you want your curtain to be stationary. Attach a Clip to each Carrier as well. Starting from the Clip on the end cap, install curtain panel onto Clips.




- ⑤ (for drapery pins): Starting from the stationary end, hook 1st pin (already attached along top of drape) into endcap and into each Carrier.

- ⑥ Attach Baton onto last Carrier.



CEILING-MOUNT INSTALLATION

- ① Unbolt Rod Clamp assembly from Wall Bracket and set wall Bracket and Bolt/Nut aside.

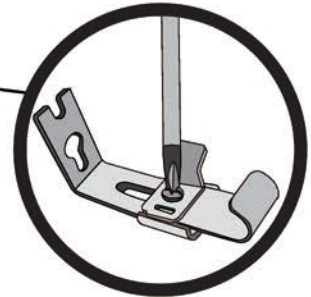

- ② The smaller Clamps are for the inner (smaller) Rod section, and the larger Clamps are for the outer (larger) Rod section. Position Rod Clamps in desired locations on ceiling, and mark the mounting hole locations. Position the other Clamp(s) evenly between the end Clamps and mark these holes as well (Clamps should never be more than 48" apart and must be in a straight line with each other). Note where the larger outer Rod ends and be sure the appropriate sized Clamp is used in each location.

- ③ Screw Rod Clamps into ceiling using the long screws provided. Screws are to be kept loose for now. Note: If the desired hole locations are not on a stud, toggle bolts (sold separately) are required for proper installation.



- ④ Attach Rod to middle Clamp(s) first. Twist Clamp using a flat blade screwdriver - clamping onto the Rod and tighten in place. Repeat for all Clamps. Tighten the ceiling mount screws.



- ⑤ (for curtain panel): Attach a Clip onto the end cap of Rod on the end you want your curtain to be stationary. Attach a Clip to each Carrier as well. Starting from the Clip on the end cap, install curtain panel onto Clips.



- ⑤ (for drapery pins): Starting from the stationary end, hook each pin (already attached along top of drape) into end cap and each Carrier.

- ⑥ Attach Baton onto last Carrier.

